
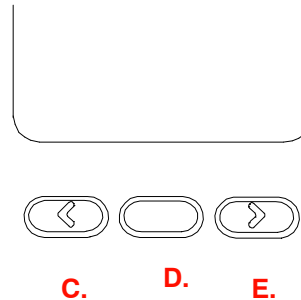


BOLERO 1 BOLERO 2

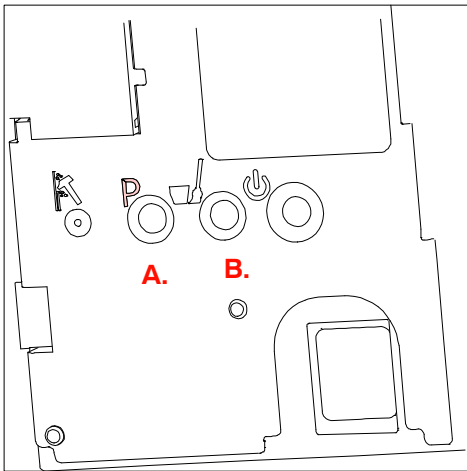

Resetting the daycounters to zero

- Press the programming button (A.) to start the programming.
- Select any drink with one of the selection buttons.
- Keep the button pressed down during 5 seconds.

The daycounter for **all** drinks is reset to zero for cups, mugs, half jugs and whole jugs.

Resetting the total counters to zero

- Press the programming button (A.) to start the programming.
- Press key B.A. at the inside of the door (min. 10 sec.).

The total counter for **all** drinks is reset to zero for cups, mugs, half jugs and whole jugs.

Interrupt the descaling program

- If the descaling has started in the meantime, then push **longer than 10 seconds** on the setting key C. to stop the descaling programme.



WARNING

- △ Stop the descaling programme **never** when you have already poured descaler into the machine!

Switching on or off the program safety

When the programming protection has been enabled, only the counters and the descaling program are accessible.

- Press the programming button (A.) to start the programming.
- Simultaneously press keys C. and E. until 'ON' or 'OFF' appears on the display.

Please note:

- The counter menu remains accessible.
- Descaling the machine remains possible.

Starting the calibration program

The pump speed can be adjusted in the calibration program.

- Press the programming button (A.) to start the programming.
- Press key B. on the inside of the door and hold it. Now also press key D. on the front side of the door.
- The speed can be adjusted using C. and E.